TIME LED®

Landscape Range: LED Deck Lights

Installation and Operating Instructions



Read and follow instructions before operating your deck lights. Save this manual for future reference.

Package includes: 1 x LED Deck Lights 1 x Manual

Safety:

• Ensure that the electricity is disconnected before any installation or maintenance is carried out. Allow 10 minutes for the deck lights to cool before handling.

• There are no serviceable parts within this kit. Deck lights with cracked diffusers or damaged power cords must be discarded.

- · Driver must be replaced with identically rated driver.
- Do not submerge any part of this kit in liquid.
- Total wattage (VA) of deck lights must not exceed the rating of the driver.
- · Check for cables and other utilities before drilling mounting holes.
- If in doubt consult a qualified technician.
- Avoid positioning deck lights in pedestrian areas as they become too hot to touch, extra caution must be taken in areas where people may walk with bare feet.

INS-781463-781470-V1

TIME LED is part of Pitacs Limited. For customer support contact:

Bradbourne Point, Bradbourne Drive, Tilbrook, Milton Keynes, Buckinghamshire MK7 8AT

T: +44 (0)1908 271155 F: +44 (0)1908 640017 E: info@timeled.co.uk W: www.timeled.co.uk











Product Code	781463 781470
Size (mm)	Ø35x28
Lamp	SMD
Watts	10 x 0.2W
Equivalent Wattage	16W
Lumens	90lm (781463) 22lm (781470)
IP Rating	IP65
Cut Out Size	30mm

Lifespan	25000 Hours
CCT Colour Temp	6000K Daylight (781463) Blue (781470)
Cable Length	2.05m
Material	Steel/Polycarbonate
Warranty	3 Years
Voltage	220-240V
Hertz	50/60Hz

Instructions for new installations:

1) Determine the layout prior to installation. Positions the deck lights, avoiding pedestrian areas, whilst bearing in mind the cable lengths and distance from the driver to a power outlet.

2) The driver should be in a position protected from adverse weather.

3) Drill mounting holes in accordance with Figure 2.

 
4) Run the cable to allow connection of deck lights.

5) Pass the deck light flex through the hole and plug into a socket on the cable.

6) Ensure the quick connect plug and sockets are positioned in a drainable area, or secured to the underside of the deck if necessary.

7) Fit the deck light into the hole ensuring it is recessed properly.

8) Plug the driver into the power outlet and turn on to test.



Cleaning:

- · Do not use any chemical or abrasive cleaners.
- · Clean product with only a soft dry cloth.
- Do not use high pressure washers to clean.



• This product is not a toy and contains small parts.

Warranty:

• This product is warranted to be free of defects in materials, design and workmanship for 3 years from the date of purchase (conditions apply, please see TIME LED website for further details). If a suspected fault should develop in this time, please contact us via the address on the front.

Recycling Advice:

Waste Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Full Technical specification available upon request. Contact info@timeled.co.uk for PDF.



Landscape Range: LED Deck Lights

Ø30mm